


The BAGMAN

SADDLEBAG MOUNTING INSTRUCTIONS

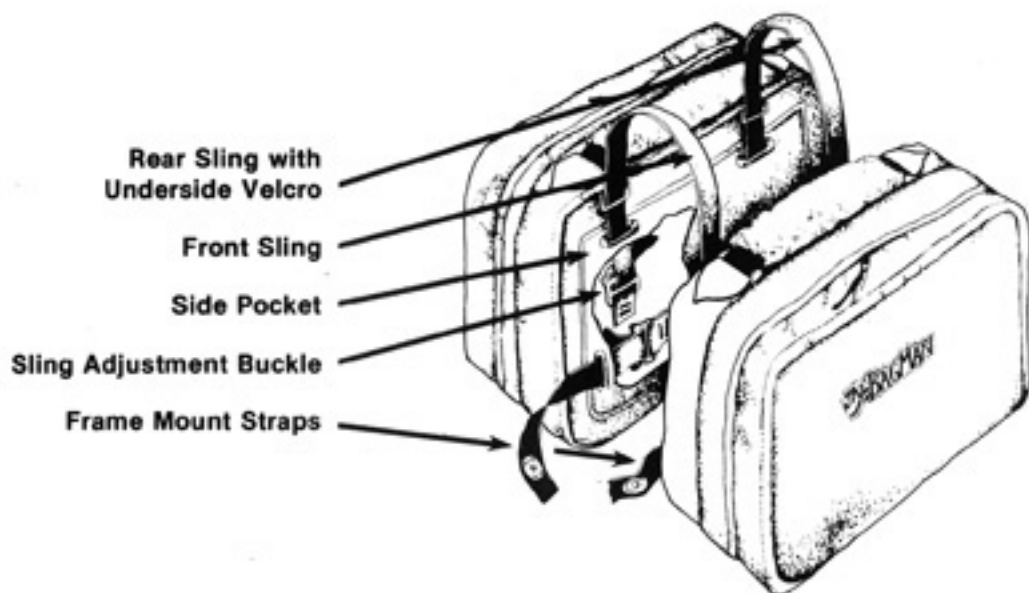


Components

- Pair of saddlebags
- Two raincovers
- Hardware—
 - 2 #12 hose clamp snaps
 - Velcro seat hook assembly


Fit-up of Three Point Mounting System

1 Sling Adjustments

Follow diagrams A and B. Make the slings as short as possible for your particular seat. The bags should not ride low.

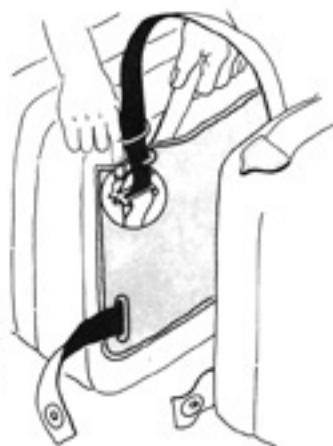

A To Shorten Sling

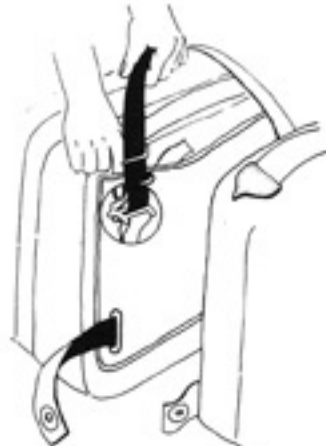

B To Lengthen Sling

WARNING


Do not allow your BagMan saddlebags to contact the exhaust pipes. Always ride with the bags properly fastened. Do not place more than 10 lbs. in each bag. Load bags evenly.

SPECIAL NOTE:

On motorcycles with mono shocks the saddlebags should ride as high as possible. Check to see if bag is able to contact wheel and shorten sling straps further if needed.

2 Frame Mounted Hose Clamp Snaps

Attach as in diagram C.

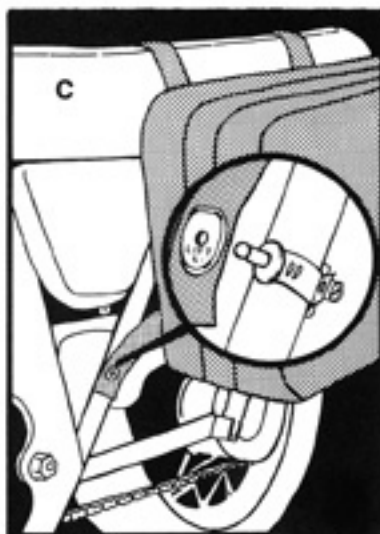

3 Velcro Seat Hook

Use the bottom adjustment to fit the hooks to your seat. Compress seat cushion with hand and tighten securely. Leave as much Velcro exposed as possible for the rear sling to mate with.



Place saddlebags on seat, mating rear sling Velcro to seat Velcro. Adjust the straps that fasten to the frame for proper length and snug fit, and snap in place.

Cleaning Instructions
Hand wash with mild soap, no bleach, air dry.